

# SIT-STAND DESK SYSTEM **EASY**

## OPERATION MANUAL



2 LEVEL COLUMN:  
705-1205 mm



3 LEVEL COLUMN:  
610-1260 mm

# SAFETY AND WARNINGS

Inappropriate use of this product may cause property or bodily injury.

Check surroundings on all sides before using the desk. Do not place any objects taller than 530 mm (3 level columns) or 625 mm (2 level columns) under the desk or frame.

Ensure the length of power cords are accounted for when operating the desk. Monitors, computers, speakers, anything with a cord that is not long enough for the desk's range of motion could be pulled down or have its wires broken. Check that no cables can get jammed.

Desks should not be used in environments with high humidity or dampness.

If you need to move the desk, DO NOT lift it only by holding the desktop. Lifting this way can stress the fasteners connecting the frame to the desktop.

Please provide this operation manual to any users, installers, or support personnel operating the product.

## USAGE

This sit-stand desk has 2 electric lifting columns.

The desk height is adjustable so the desktop can be fixed for most suitable user's position. These desks are designed only for ergonomic sit-stand position. Do not move around, crawl or lie under the desk frame. Do not sit or stand on the desk frame or desktop. Any other use is at user's risk.

## SETUP AND INSTALLATION

Choose a placement for the desk that is a safe distance from window frames, radiators, furniture etc.

Once the desk has been assembled, adjust the feet so that the desk is level and does not shift its position. After this, connect the desk to the 220 v outlet and the desk is ready for use. **For the first start of desk please press and hold "down" button for control box activation.**

## IMPORTANT

- 80**  
KG  
Functional load of desk is 80 kg.  
Do not exceed this given load.
- 1**  
MIN  
! Please keep in mind that time for continuous desk movement upwards or downwards is 1 minute.
- 9**  
MIN  
After 1 minute of unstopped operation there has to be a resting period of 9 minutes.
- 38**  
MM/S  
Travel Speed Up to 38 mm/s.

## TROUBLESHOOTING

If your desk does not function properly (does not go up or down; does not move at all) please do the **RESET**:

- Press and hold "Down" button for 5 seconds.  
This will reset control box of columns.
- Now the desk is ready for use.

If this does not work please contact your seller.

